



ELEKTRONICKÉ POISTKY 12/24 V DC

Série 7164xx

716400

El. fuse. 1-10A. Signal at failure

- Šírka 6,2 mm
- Spoľahlivo rieši 12/24 V DC obvody
- Môže byť dodávaný cez rozvodnú koľajnicu
- Voliteľná charakteristika








POPIS PRODUKTU


ŠPECIFIKÁCIA

Adjustable current max	10 A
Adjustable current min.	1 A
Adjustable steps	1 A
Capacitance Max	10000 μ F
Cross Section Max	2,5 mm ²
Cross section min	0,25 mm ²
EMC	EN61000-6-2, EN61000-6-3
Hĺbka	116 mm
Hmotnosť	120 g
Input Current Max	10 A
Power Distribution Via Rail Max	40 A
Prevádzková teplota max.	50 °C
Prevádzková teplota min.	-25 °C
Prevádzkové napätie DC max.	30 V
Prevádzkové napätie DC min.	10 V
Reaction time	800 ms


Šírka	8,1 mm
Trieda krytia	IP20
Úbytok napätia na polovodiči	170 mV
Výška	114,5 mm
Výstupný prúd max.	10 A
Zhoda s normami	CE, cULus, GL

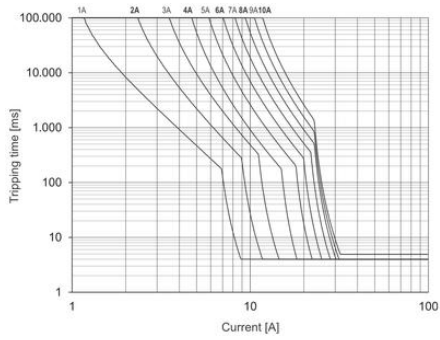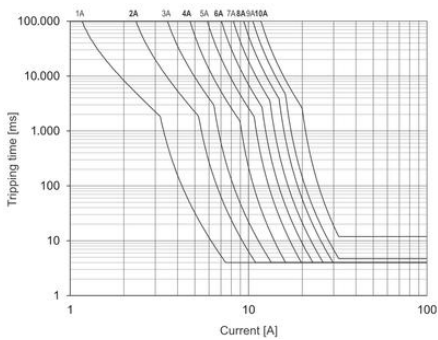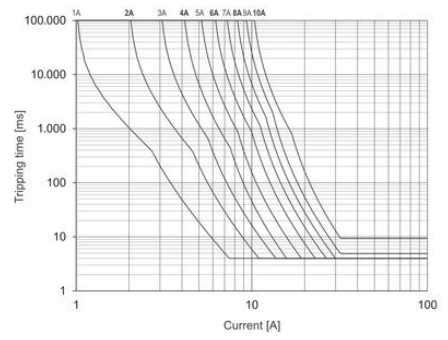
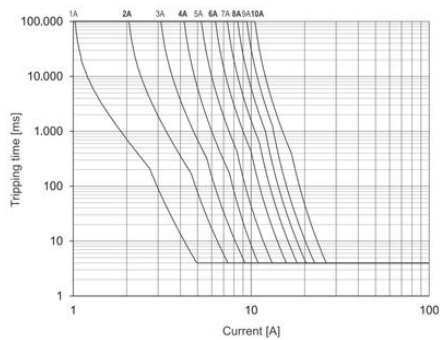
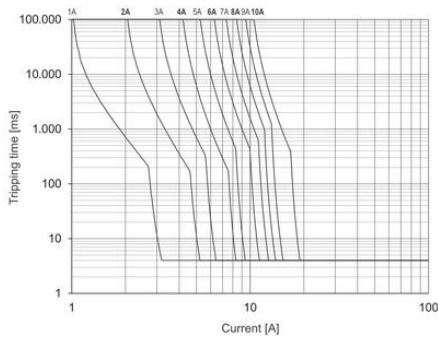


Tilslutninger

 

 - 1: Udgang
- 2: Ekstern nulstilling/afbrydelse
- 3: Statusudgang
- 4: Ikke tilsluttet
- 5: 0 V
- 6: 24 V DC (enkelt forsyning)
- 7: 24 V DC forsyning via strømskinne



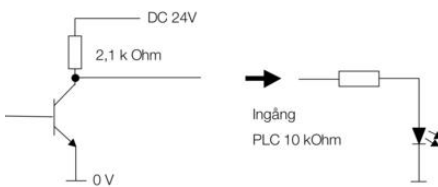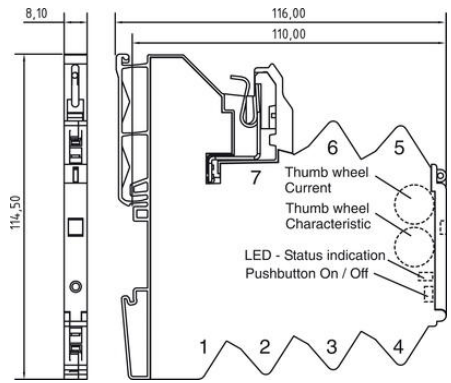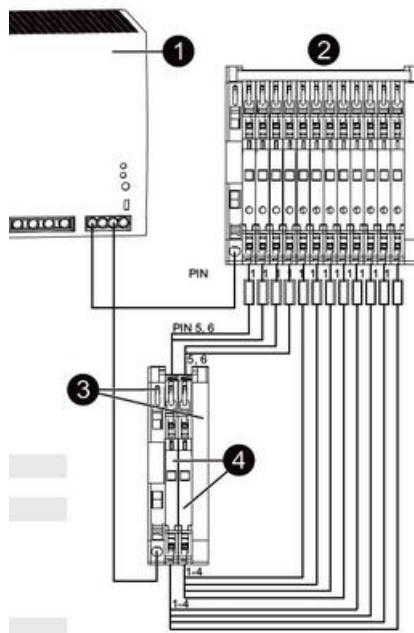

EN LED Status, Button, Rotary Switch

LED green	ON	Function is OK*
LED green, flashing 1 Hz	Overload	Load above 90 % of I nominal
LED green, flashing 5 Hz	Overload	Load above 100 % of I nominal
LED red	OFF	Module switched off or acknowledged*
LED red, flashing 1 Hz	Overload	Output off due to overload/short circuit*
LED red, flashing 5 Hz	Error	Wiring error - feedback (internal error)
LED red, flashing shortly	OFF	Output off via remote sel/reset
Button ***	ON/OFF	Nominal operation: ON/OFF
		Load monitoring tripped: 1st push: acknowledge
		2nd push: ON

Rotary Switch (I) - Switch Position** Rated current, see page 4.

Rotary Switch (C) - Switch Position** Characteristic: 1: fast 2: middle
3: slow-1 4: slow-2 5: slow-3

* If the operating voltage is switched off, the last status is saved (Default).
** Accept the setting - after switching on again via the button, not by Remote Sel/Reset
*** Master function - switch off via push button, can only be switched on again via push button